

haakaa®

BABY NAIL CARE SET & REPLACEMENT PADS COMBO

Product Manual

AMZ163 E10400

Product Name: Baby Nail Care Set & Replacement Pads Combo**Materials:** Electric Nail Trimmer & Storage Case - ABS, PP, PPS

Trimmer Pads & Cone - ABS, Sanding Paper, Metal

Dimensions: 1x Electric Nail Trimmer Body - 131 x 42 x 31mm

9x Nail Trimmer Pads - 19 x 19 x 21mm

1x Nail Trimmer Cone - 10 x 10 x 30mm

1x Storage Case - 155 x 86 x 53mm

*Requires 2 X AA batteries (not included)

Colours: Assorted/Meadow/Acorn/Lavender

Product Description:

Keep the whole family's nails smooth and edge-free with this must-have set featuring our Haakaa Nail Trimmer and a set of replacement pads. With pads suitable for teeny, tiny newborn nails right through to your own more mature nails, simply select the pad you need and slot it into the trimmer. The trimmer has an easy-to-use, one-button operation that allows you to trim down your baby's nails (or your own) without the risk of injury that comes with traditional tools like nail scissors or clippers.

Features:

- Includes the Haakaa Electric Nail Trimmer and pads, plus a bonus set of replacement pads.
- Pressure-activated arrest system to prevent injury.
- Trimmer pads feature varying grit levels to suit different ages.
- Two rotation speeds and directions to choose from.
- Whisper-quiet with an LED light at the front for nighttime use.
- Suitable for children and adults.

Cleaning & Care:

Ensure the nail trimmer is switched off before cleaning. Please do not use abrasive cleaners, thinners or solvents on any part of this Electric Nail Care Set. Do not submerge. To clean your trimmer parts, wipe gently with a dry, soft cloth or cotton swab. Keep in a cool, dry place and avoid direct sunlight.

Caution:

⚠ WARNING

To be operated by adults only. This product is not a toy.

- Keep this product and small parts including all replacement filing pads, out of reach of children and pets, as small parts may present a choking hazard that could result in injury or death.
- Check product condition regularly. Discontinue use at first signs of damage.
- Inspect the filing pads regularly and replace if worn or damaged.
- Do not place the spinning trimmer pad directly onto skin.
- Turn this product off when not in use. Do not leave product unattended while in use.
- Do not use this product for anything other than its intended use.
- Not to be used on animals.
- Do not stop the rotating part of the trimmer with excessive force. If the trimmer body becomes hot or starts to smoke, turn off immediately and contact Haakaa customer service.
- Store in a dry place and keep away from water. This product is not waterproof or water resistant.
- Do not expose to extreme temperatures. Store away from sunlight.
- Keep all trimmer parts stored in the dedicated storage case to avoid accidental damage. When the product is not in use, store it in the protective case.
- Do not drop, forcefully throw, or shake the appliance at any time, as this may cause breakages or malfunctions.
- If any discomfort is felt during use, please check that all parts are attached correctly. If discomfort persists, discontinue use.
- We do not recommend using this product on weak, damaged, diseased or brittle nails.
- Do not attempt to modify, disassemble, or repair the product by yourself.

 
Battery Use:

- Keep batteries away from children and pets. Always follow battery manufacturer's instructions on the safety, usage and disposal of batteries.
- The battery compartment is secured with a captive screw, requiring the use of a tool to access the batteries.
- Please use the same type of non-rechargeable AA batteries with consistent voltage, do not mix old/new batteries or different brands/types, and ensure correct polarity (+/-).
- Batteries should always be installed by an adult.
- Remove batteries if not in use for an extended period.
- Check battery condition regularly. Replace if there's any sign of rust or leakage and clean the battery compartment.
- Never dispose of batteries in a fire.
- Please avoid using low-quality batteries and dispose of used batteries responsibly.

Replacement Parts

As your trimmer parts wear down from use, they will need to be replaced. All replacement pads are available through www.haakaa.co.nz or your nearest Haakaa stockist.

Electric Nail Trimmer

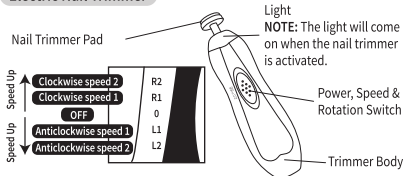

Light
NOTE: The light will come on when the nail trimmer is activated.

Power, Speed & Rotation Switch

Trimmer Body


Recommended Age Guide:

	Assorted	Meadow	Acorn	Lavender
12m+	Orange	Matcha	Coffee	Blackberry
6-12m	Green	Grass	Barley	Violet
3-6m	Blue	Seafoam	Acorn	Misty Lilac
0-3m	Pink	Oatmeal	Oatmeal	Lavender
Adult Metal Cone & Pad				


Case contains convenient age guide so you always know which pad to use!

PLEASE NOTE: Trimmer pad age suggestions are guides only. Trimmer pads of different strengths can be used to suit your child's needs. These attachments are also suitable for adults.


Assembly Instructions:

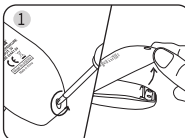

Use a Phillips head screwdriver to turn screw 7-10 times then remove panel. The washer will keep the screw attached to the panel. Remove the panel by sliding back then lifting.

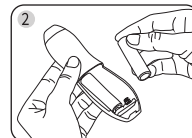

Insert 2x AA batteries into the compartments and match the (+) and (-) symbols.



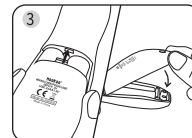


After batteries are inserted, slide the back panel back into the slot and tighten the screw firmly.

NOTE: Check trimmer is still operating normally after changing batteries. If trimmer is not working, confirm batteries have been correctly installed. If you notice the rotation speed decreasing or the light dimming, please replace the batteries. Make sure the switch is in the OFF position before changing batteries. Remove batteries if not in use for an extended period.

Contains small parts – keep away from children and pets at all times. Screw is held in place with a washer inside the covering – to avoid breaking, do NOT forcefully remove screw. If the screw has been lost or misplaced, replace with 2.6 x 8mm Phillips screw.

Instructions:

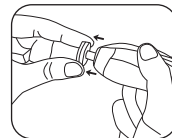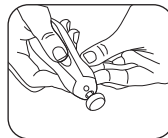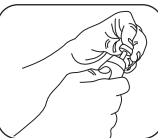

1. Choose the trimmer pad most suitable for your child's age.
2. Hold your child comfortably and firmly and hold their hand out straight with their fingers spread.
3. Hold the trimmer away from your child and turn on the power switch. The trimmer attachment will begin to spin immediately.
4. Starting with the slowest speed, place the spinning trimmer pad onto the end of your child's nail to begin filing. Adjust speed as required.
5. When moving between nails, switch the trimmer off and ensure your child is still comfortable and secured to prevent accidental injury.
6. When you have finished filing your child's nails, remove all nail dust from the trimmer pad with a dry cloth and wash your child's hands.
7. Remove the trimmer pad by holding the trimmer body in one hand and pulling the trimmer pad attachment firmly upwards with the other. Store all parts in the storage case.

Caution:

Do not hold the spinning trimmer pad in one spot for extended periods of time. This can lead to damage and heat caused by friction.