

Product Name: Double-Ended Silicone Brush

Materials: Food-Grade Silicone, Stainless Steel

Dimensions: Double-Ended Silicone Brush - 271mm length
- Bottle Brush Head - 43mm diameter
- Tapered Brush Head - 22mm diameter

Colours: Blush/Suva Grey/Lime/Mist Blue

Product Description:

Take care of your Haakaa products and other household items quickly and efficiently with our Double-Ended Silicone Brush! Its soft, flexible silicone bristles provide a full 360° clean. One end has a rounded brush head perfectly sized for your pumps, bottles, Silicone Milk Storage Bags or any general items. The other end has a smaller tapered tip to reach the corners of bottle teats, Ladybug Milk Collectors and more!

This brush is made to last, unlike plastic dish brushes that accumulate food particles, are prone to bad smells and need frequent replacing. Featuring a hook on the tapered head, it's easy to hang for drying or storage.

Features:

- Soft 100% silicone bristles flex to reach every angle of your breast pumps, baby bottles, Ladybug Milk Collectors, teats and more!
- Includes two brush heads for targeted cleaning.
- Durable stainless steel handle won't rust or corrode.
- Hangs up for quick and easy drying and storage.
- BPA, PVC and phthalate-free.

Cleaning and Care:

To clean the brush, wash in warm, soapy water then rinse and dry thoroughly. Sterilise by boiling in water for 2-3 minutes. Let water cool then use tongs to remove brush to avoid burns. Brush is **NOT** suitable for sterilising in microwaves or sterilisers. Do not use any bleach-based cleaners or tablets to clean or sterilise your Haakaa products. Ensure it is dried thoroughly in a well-ventilated area. Store in a cool, dry place and avoid direct sunlight.

Round bottle brush head
for 360° cleaning

Durable stainless steel body
won't rust or corrode

Tapered brush head to
reach those tight corners

Hook for convenient
hanging or drying

Caution:

Check product condition regularly. Replace if this product shows any signs of damage. Do not store near any sharp objects. This product is not a toy. Do not use this product for anything other than its intended purpose. Keep out of reach of children and pets.

PLEASE NOTE: The brush heads may slip off when used with soap or detergent. Simply reattach to continue using.