

| | | |
|------------------|--|--|
| Product Name: | Electric Nail Trimmer Replacement Pads | |
| Materials: | ABS, Sanding Paper | |
| Dimensions: | 4 x Nail Trimmer Pads - 19 x 19 x 21mm | |
| Colours: | Meadow/Oatmeal/Seafoam/Grass/Matcha Assorted/Pink/Blue/Green/Orange | |
| Recommended Age: | Pink: 0-3m Blue: 3-6m Green: 6-12m Orange: 12m+ | Oatmeal: 0-3m Seafoam: 3-6m Grass: 6-12m Matcha: 12m+ |


Product Description:

Keep your Haakaa Electric Nail Care Set going with our Trimmer Replacement Pads! These pads replace your worn ones so you can keep your trimmer going for longer! Each set includes four replacement pads, with each colour corresponding to your baby's needs at different stages. The vivid and vibrant colours draw children's attention, leaving them more receptive to having their nails trimmed.


Our Nail Trimmer lets you safely trim your baby's nails without the need for sharp scissors. Simply attach the trimmer pad suitable for your child and gradually file their nails! The trimmer pads leave your baby's nails smooth, preventing sharp edges that may scratch their delicate skin.

Features:


- Convenient pack is compatible with the Haakaa Electric Nail Care Set!
- Interchangeable heads with vivid colours correspond to different filing capacities, suitable from newborn to the whole family!
- Delicate, even surface lets pads rotate efficiently, polishing nails smooth without discomfort.
- High-quality, layered sand for more effective filing and long-lasting use.

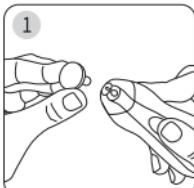Assembly Instructions:

Choose the trimmer pad most suitable for your child's age and needs.

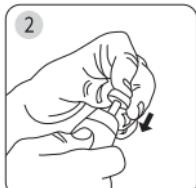

Insert the pad firmly into trimmer, as per instructions on trimmer manual.

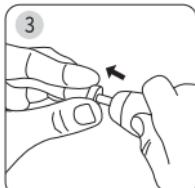

To remove, pull trimmer pad firmly out of the socket.

Cleaning and Care:

Clean this product by wiping gently with a soft, dry cloth or cotton swab. Do not use any abrasive cleaners, thinners or benzine to clean this product. Do not submerge. Keep in a cool, dry place and avoid direct sunlight.

Caution:

- Keep out of reach of children and pets when not in use.
- Check product condition regularly. Discontinue use at first signs of damage.
- Do not place the spinning trimmer pad directly onto skin.
- Do not leave product unattended while in use.
- Do not use this product for anything other than its intended use.
- Not to be used on animals.
- Do not stop the rotating part of the trimmer with excessive force.
- If any discomfort is felt during use, please check that all parts are attached correctly. If discomfort persists, discontinue use.
- We do not recommend using this product on weak, damaged, diseased or brittle nails.

PLEASE NOTE: The trimmer pad age suggestions are guides only and may vary according to each baby's needs. This product is an attachment for our Electric Nail Trimmer, and will not work by itself.