

Share your best tips, tricks and thoughts with our Happii Haakaa Community.

FOLLOW US: [@haakaanz](#)

haakaa® IS A REGISTERED TRADEMARK OF THINK GREEN LIMITED NEW ZEALAND.
63 Riverland Road, Rd 2, Kumeu, 0892, New Zealand
Designed in New Zealand. Made in China.
For more information, please visit: www.haakaa.co.nz

haakaa®

Happii Bear Nail Care Set

Safe for even the tiniest nails!

SGE045 E08270

Charge & GO!

Product Name: Happii Bear Nail Care Set
Materials: ABS, PP, GPPS, Sanding Paper, 500mAh Li-ion Battery
Dimensions: Nail Trimmer Bear Body - 42 x 39 x 132mm
Nail Trimmer Pad - 19 x 19 x 21mm
Nail Trimmer Cone - 10 x 10 x 30mm
USB Charging Cable length - 830mm
Storage Case - 162 x 91 x 67mm
Pebble/Polar White/Toffee
1 x Rechargeable Nail Trimmer Bear Body
5 x Nail Trimmer Pads
1 x Nail Trimmer Cone
1 x USB Type-C Charging Cable
1 x Storage Case

Colours: Rechargeable Bear Nail Trimmer
Contents: Storage Case with USB Cable, Trimmer Pads & Cone

Service Life: 2 years
Battery Capacity: 500mAh
Cycle Life of Battery: 300 times

Product Description
Say goodbye to sharp scissors and clippers, and say hello to the Happii Bear Nail Care Set! This adorable nail trimmer has a special polar bear design to capture your baby's attention, making it easier to turn those scary nail trimming sessions into quality bonding time.

To use, simply attach the trimmer pad suitable for your child's age and gently file their nails. The whisper-quiet trimmer features two rotation speeds and directions, as well as a soft LED light for easy night-time filing. It's rechargeable, making it better for the environment and your wallet - no more hunting for spare batteries! And best of all, the Happii Bear Nail Care kit is suitable for the whole family, from newborns to mum and dad.

Features

- The simple, safe and effective way to trim your child's delicate little nails.
- Eco-friendly and convenient - recharges via USB, so no replacing batteries!
- Battery is capable of 2 hours continuous use on one full charge.
- Pressure-activated arrest system to prevent injury.
- Easy-to-use, one-button operation with two rotation directions and speeds.
- Whisper-quiet with a soft LED light for discreet night-time trimming.
- Bear-shaped body is ergonomically designed so is comfortable to hold.
- Includes a range of high-quality filing pads suitable from newborn to mum and dad.
- Portable, neatly-organised storage case with convenient age guide.

Cleaning and Care
Ensure the nail trimmer is switched off before cleaning. Please do not use abrasive cleaners, thinners or solvents on any part of this Nail Care Set. Do not submerge. To clean your trimmer parts, wipe gently with a dry, soft cloth or cotton swab. Keep in a cool, dry place and avoid direct sunlight.

Nail Trimmer Pad Set

Recommended Age Guide

Age Group	Polar White	Pebble	Toffee
0-3m	0-3m Baby Pads	0-3m Baby Pads	0-3m Baby Pads
3-6m	3-6m Baby Pads	3-6m Baby Pads	3-6m Baby Pads
6-12m	6-12m Baby Pads	6-12m Baby Pads	6-12m Baby Pads
12m+	12m+ Adult Metal Cone & Pad	12m+ Adult Metal Cone & Pad	12m+ Adult Metal Cone & Pad

Case contains convenient age guide so you always know which pad to use!

PLEASE NOTE: Trimmer pad age suggestions are guides only. Trimmer pads of different strengths can be used to suit your child's needs. These attachments are also suitable for adults.

Replacement Parts
As your trimmer pads wear down from use, they will need to be replaced. All replacement pads are available through www.haakaa.co.nz or your nearest Haakaa stockist.

For your child's safety BEFORE USE
Ensure you read all instructions carefully and retain them for future reference. This product is for nail care only.

Rechargeable Nail Trimmer

Charging Instructions

Charge for a full cycle before first use. When the trimmer is low on power, the indicator light will flash yellow to let you know it needs charging. To charge, insert the USB plug into the trimmer's charging port.

Connect the other end of the USB to a charging adapter.

The indicator light is red while charging and turns to green when the trimmer is fully charged. Charging the device takes approximately 2 hours. When fully charged, the trimmer can be used at high speed for up to 2 hours.

PLEASE NOTE: We recommend you only use the charging cable that comes with the product. Other charging cables may affect normal usage. If the trimmer isn't used regularly, make sure to charge it at least once a month to maintain battery capacity. Do not use this product while charging. If the USB cable is damaged, discontinue use. Use DC 5V 1A only. Do not use high-voltage or fast-charging adapters.

How to Use Your Happii Bear Nail Trimmer

1 Choose pad most suitable for your child and push securely in place.

2 Hold your child's hand out straight with fingers spread.

3 Hold trimmer away from your child and turn on power switch.

4 Holding trimmer body firmly, start on the slowest speed and begin filing nails. Adjust speed as required.

... Continued

Caution

⚠ WARNING

- This device should **ONLY** be operated by adults.
- This product is not a toy.
- Keep this product and all of its parts out of reach of children and pets. Small parts are a choking hazard and could result in injury or death.
- Keep the USB cable out of reach of children or pet, because a long USB cable may cause strangulation.
- Check product condition regularly. Discontinue use at first signs of damage.
- Do not place the spinning trimmer pad directly onto skin.
- Turn this product off when not in use. Do not leave product unattended while in use.
- Do not use this product for anything other than its intended use.
- Not to be used on animals.
- Do not use the product when you are close proximity to strong static electricity or electromagnetic fields, and avoid using the mobile during operation.
- No modification of this equipment is allowed.
- Do not expose the device to extreme temperature, very high humidity level, or direct sunlight.
- Do not stop the rotating part of the trimmer with excessive force. If the trimmer body becomes hot or starts to smoke, turn off immediately and contact Haakaa customer service.
- Store in a dry place and keep away from water. This product is not waterproof or water resistant.
- Keep all trimmer parts stored in the dedicated storage case to avoid accidental damage.
- Do not drop, forcefully throw, or shake the appliance at any time, as this may cause breakages or malfunctions.
- If any discomfort is felt during use, please check that all parts are attached correctly. If discomfort persists, discontinue use.
- We do not recommend using this product on weak, damaged, diseased or brittle nails.
- Do not attempt to modify, disassemble, or repair the product by yourself.

NOTE: Don't hold the spinning trimmer pad in one spot for extended periods. Damage and heat (from friction) may occur.

Battery Use

- The lithium battery's service life is 2 years. Do not use this device more than 2 years after manufacture date, even if it has only been used rarely during this time.
- Do not expose to extreme temperature.
- This product does not include a power adapter. Use only with USB power adapters compliant with IEC 60601-1.
- Use only 5V/1A standard USB adapters. Do not use fast-charging (e.g. 9V/12V) or non-standard adapters.
- Avoid prolonged continuous charging whenever possible, as overcharging may lead to battery overheating.
- The device should always be charged by adults only.
- Only use the charging cable that comes with the product. Do NOT use incompatible chargers.
- If the aspirator isn't used regularly, make sure to charge it at least once a month to maintain battery capacity.
- This product contains a lithium battery. Please dispose of it at a certified battery recycling drop off point.

Warranty & Support
This product is warranted for a period of one year from the date of purchase.

This warranty does not cover:

- Damage due to improper use, normal wear and tear, or defects that have a negligible effect on the value or operation of the appliance.
- The warranty becomes void if any unauthorised persons undertake repairs and if original Haakaa parts are not used.

Before making a return, please contact your local Haakaa retailer or customer service for advice on submitting a warranty claim.

This product comes with no implied warranties, including those of merchantability or fitness for a specific purpose, unless such disclaimers are prohibited by law. Haakaa will not be responsible for any indirect, consequential, special, or punitive damages that might arise from a breach of the explicit limited warranty or any legally implied warranties. The only warranty for this product is the express limited one described previously; any other oral, written, or implied promises are not valid.

Customer Service
For further assistance, please contact customerservice@haakaa.co.nz

Troubleshooting

Problem	Possible Cause	Solution
Abnormal noise.	The trimmer pad was not installed correctly.	Remove trimmer pad and reinstall correctly as guided.
The trimmer does not work.	The battery is low or out of power.	Charge the trimmer as guided.
The charging indicator does not light up.	The USB cable is not properly connected.	Plug the USB cable correctly into the trimmer charging port and charging adapter. Ensure power source is switched on.
The trimmer pad easily falls out.	The trimmer pad was not installed correctly.	Remove trimmer pad and reinstall correctly as guided.
Other problems	/	Please consult your local Haakaa retailer or contact customer service.

NOTE: If the product still does not work properly after using the above solutions, please discontinue use and contact your nearest Haakaa stockist.