

Share your best tips, tricks and thoughts with our Haakaa Community.



haakaa® IS A REGISTERED TRADEMARK OF THINK GREEN LIMITED NEW ZEALAND.
63 Riverland Road, Rd 2, Kumeu, 0892, New Zealand
Designed in New Zealand. Made in China.
For more information, please visit:
www.haakaa.co.nz



SGE066-A E08540

Nail Trimmer Pad Set



Case contains convenient age guide so you always know which pad to use!


PLEASE NOTE: Trimmer pad age suggestions are guides only. Trimmer pads of different strengths can be used to suit your child's needs. These attachments are also suitable for adults.

Replacement Parts

As your trimmer pads wear down from use, they will need to be replaced. All replacement pads are available through www.haakaa.co.nz or your nearest Haakaa stockist.

3

Electric Nail Trimmer

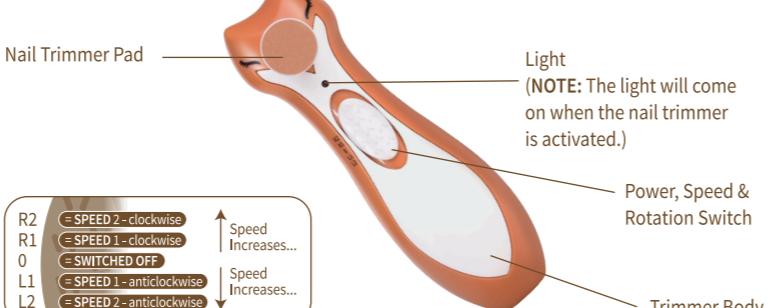

For your child's safety BEFORE USE

Ensure you read all instructions carefully and retain them for future reference. This product is for nail care only.

4

...continued



 
To avoid injury, switch trimmer off between nails and ensure your child is comfortable.



Once done, clean trimmer pad with a dry cloth and wash your child's hands.



To remove trimmer pad, pull firmly out of the socket.



Store all parts in the storage case.

7 NOTE: Don't hold the spinning trimmer pad in one spot for extended periods. Damage and heat (from friction) may occur.

5

Caution

⚠️ WARNING

To be operated by adults only. This product is not a toy.

- Keep this product and all of its parts out of reach of children and pets. Small parts are a choking hazard and could result in injury or death.
- Check product condition regularly. Discontinue use at first signs of damage.
- Do not place the spinning trimmer pad directly onto skin.
- Turn this product off when not in use. Do not leave product unattended while in use.
- Do not use this product for anything other than its intended use.
- Do not use on animals.
- Do not stop the rotating part of the trimmer with excessive force. If the trimmer body becomes hot or starts to smoke, turn off immediately and contact Haakaa customer service.
- Store in a dry place and keep away from water. This product is not waterproof or water resistant.
- Do not expose to extreme temperatures. Store away from sunlight.
- Keep all trimmer parts stored in the dedicated storage case to avoid accidental damage. When the product is not in use, store it in the protective case.
- Do not drop, forcefully throw, or shake the appliance at any time, as this may cause breakages or malfunctions.
- If any discomfort is felt during use, please check that all parts are attached correctly. If discomfort persists, discontinue use.
- We do not recommend using this product on weak, damaged, diseased or brittle nails.
- Do not attempt to modify, disassemble, or repair the product by yourself.

Battery Use

- Keep batteries away from children and pets. Always follow battery manufacturer's instructions on the safety, usage and disposal of batteries.
- Please use the same type of non-rechargeable AA batteries with consistent voltage, do not mix old/new batteries or different brands/types, and ensure correct polarity (+/-).
- Batteries should always be installed by an adult.
- Remove batteries if not in use for an extended period.
- Check battery condition regularly. Replace if there's any sign of rust or leakage and clean the battery compartment.
- Never dispose of batteries in a fire.
- Please avoid using low-quality batteries and dispose of used batteries responsibly.

6

8 NOTE: Don't hold the spinning trimmer pad in one spot for extended periods. Damage and heat (from friction) may occur.

Product Name: Clever Fox Nail Care Set
Materials: ABS, PP, GPPS, Sanding Paper, Metal
Colour: Autumn
Contents: 1 x Electric Nail Trimmer Body - 135 x 42 x 38mm
5 x Nail Trimmer Pads - 19 x 19 x 21mm
1 x Storage Case - 156 x 91 x 51mm
* Requires 2 x AA batteries (not included)



Product Description

The Haakaa Clever Fox Nail Care Set lets you safely trim down your baby's nails without the need for sharp scissors or clippers! The adorable fox trimmer, in the vibrant colours of autumn leaves, makes nail care time more fun than ever. It has a pressure-activated arrest system, so is safe for even the tiniest nails.

Our Nail Care Set has two rotation directions and speeds to suit your needs. It's whisper quiet and features a soft LED light for easy nighttime filing.

Simply attach the trimmer pad suitable for your child's age and gradually file down their nails. The trimmer pads gently smooth your baby's nails without leaving sharp edges that may scratch their delicate skin. And best of all, the Clever Fox Nail Care Set is suitable for the whole family, from newborns to Mum and Dad.

1

Features

- Pressure-activated arrest system to prevent injury.
- Easy-to-use, one-button operation with two rotation directions and speeds.
- Whisper quiet with a soft LED light at the front for discreet nighttime trimming.
- Ergonomically designed fox shape is easy to hold.
- Includes a range of high-quality filing pads suitable from newborn to adult.
- Portable, neatly-organised storage case with convenient age guide.

Cleaning and Care

Ensure the nail trimmer is switched off before cleaning. Please do not use abrasive cleaners, thinners or solvents on any part of this Electric Nail Care Set. Do not submerge. To clean your trimmer parts, wipe gently with a dry, soft cloth or cotton swab. Avoid using any heating method to sterilise the product as it can cause damage. Keep in a cool, dry place and avoid direct sunlight.

2

Assembly Instructions



Use a Phillips head screwdriver to loosen the security screw. Remove the panel by sliding back then lifting.

After batteries are inserted, slide the back panel back into the slot and tighten the screw firmly.

5

6

7

8

9

10

How to Use Your Electric Nail Trimmer



Troubleshooting

Problem	Possible Cause	Solution
Abnormal noise.	The trimmer pad is not installed correctly.	Remove trimmer pad and reinstall as per instructions.
The trimmer does not work.	Batteries or battery may be running low.	Replace batteries.
Poor nail filing results.	Incorrect speed or trimmer pad selected.	Increase the speed, or consider replacing the trimmer pad with one suitable for a higher age range.
The trimmer pad easily falls out.	The trimmer pad is not installed correctly.	Remove trimmer pad and reinstall as per instructions.

NOTE: If troubleshooting chart does not resolve your product issue, please discontinue use and contact your nearest Haakaa stockist.

9

Warranty & Support

Warranty
This product is warranted for a period of one year from the date of purchase.

This warranty does not cover:

- Damage due to improper use, normal wear and tear, or defects that have a negligible effect on the value or operation of the appliance.
- The warranty becomes void if any unauthorised persons undertake repairs and if original Haakaa parts are not used.

Before making a return, please contact your local Haakaa retailer or customer service for advice on submitting a warranty claim.

This product comes with no implied warranties, including those of merchantability or fitness for a specific purpose, unless such disclaimers are prohibited by law. Haakaa will not be responsible for any indirect, consequential, special, or punitive damages that might arise from a breach of the explicit limited warranty or any legally implied warranties. The only warranty for this product is the express limited one described previously; any other oral, written, or implied promises are not valid.

Customer Service

For further assistance, please contact customerservice@haakaa.co.nz

10