

Product Name: Dot Seal Silicone Storage Bag Set

Material: Food-Grade Silicone

Dimensions: 500ml - 185 x 49 x 120mm
1000ml - 232 x 58 x 150mm
1500ml - 262 x 66 x 170mm

Capacity: 500ml/1000ml/1500ml

Colour: Turquoise

Product Description:

Keep food fresh, safe, and always within reach the smart, reusable way using the Haakaa Dot Seal Silicone Storage Bag Set! Made from 100% food-grade silicone, these handy and incredibly effective storage bags are the durable and leakproof alternative to single-use plastics. They're perfect for storing and preserving fruits, vegetables, meats, cooked meals or even snacks and are ideal for use at home or on the go. The leak-free Dot Seal closure with interlocking holes and raised ridges locks in freshness and prevents leaks, even when inverted or squeezed, keeping out moisture and contamination. You can also pop these bags into microwaves or steamers when it's time to warm food – just keep a couple of the Dot Seals open for steam to escape. The wide openings allow for easy filling and cleaning, while the sturdy bases keep the bags upright during use. One side of each bag is even transparent, letting you see at a glance the condition of the foods you have stored. They're also super simple to clean and sterilise for long-term use and are safe in dishwashers, microwaves and boiling water.

Features:


- Reusable, fully-sealed and durable alternative to single-use plastic bags.
- Versatile – store, preserve & warm food or take out for on-the-go snacking.
- Ultimate leakproof seal keeps contents safe and fresh, with no leakage even when inverted or squeezed.
- Interlocking Dot Seal design prevents moisture and contaminants from entering.
- Sturdy, flat base ensures a stable, upright position while in use.
- Includes a storage loop at the side and a small opening at the top to hang and dry.
- Transparent on one side to keep track of food condition at a glance.
- 3 sizes to accommodate different needs, from smaller items to larger sized.
- Wide opening allows easy filling, access and cleaning.
- 100% food-grade silicone withstands extreme temperatures and is tear-resistant for durable, long-term use.
- Fridge, freezer, microwave, boiling water and dishwasher safe.
- BPA, PVC and phthalate-free.

Cleaning and Care:


Wash before and after each use. Although dishwasher safe, we recommend hand washing with warm, soapy water, then rinsing and drying thoroughly. To sterilise, use a steam steriliser or boil in water for 2-3 minutes. Do not use bleach-based cleaners or tablets to clean this product. Only soft bristle brushes or soft sponges should be used to clean this product, as hard scourers may scratch the surface. Silicone may absorb the colours of foods it comes in contact with. To minimise discolouring, wash immediately after use. Store product in a cool, dry place and avoid direct sunlight.

Instructions:


For storage:

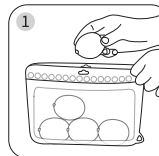


Place your chosen contents into the bag, ensuring it's not overfilled. Place heavier contents at the bottom and avoid placing lighter, softer items underneath.

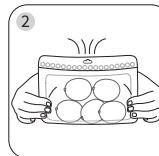

Gently squeeze out the excess air, taking care not to spill your food.

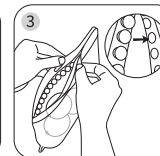


Press each sealing dot firmly. Check again to ensure the seal is fully closed and there are no gaps.

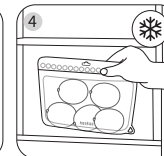


Place upright in the fridge or freezer with the clear side facing outwards for quick tracking. Please follow freshness guidelines for food when storing.


For food warming :

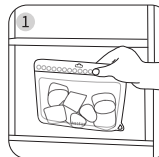


Only use this bag to warm microwave-safe food.

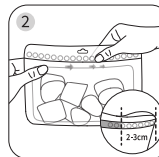

Press sealing dots firmly. Make sure to leave at least a 2-3cm gap (1-2 dots) for steam to escape.

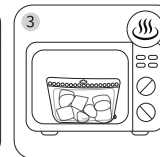

With the bag standing upright, microwave in the centre of the microwave.

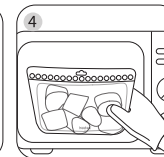

Remove from microwave using oven mitts. Open away from your face to release steam.

Caution:

- For adult use only.
- To avoid suffocation, keep this bag away from children and pets. This bag is not a toy.
- Do not use bag on stovetops, in ovens, or on/under grills.
- When heating food, be sure to follow the instructions provided. Ensure only foods suitable for microwave heating are chosen.
- Check product condition regularly. Replace if this product shows any signs of damage.
- Avoid placing sharp objects in or on the bag, as they may damage it.
- Allow hot foods and liquids to cool before sealing and storing. Food warming times may vary according to quantity, variety & size of food and the wattage of your microwave. Always monitor when microwaving.
- Take extra care when microwave heating; localised overheating can occur. Always mix the heated food and check the temperature before eating or feeding to your child.
- Follow manufacturer's instructions on the use of your microwave.
- Always transfer contents to a clean dish after heating.
- Ensure this product is clean before use.



WARNING: Use caution when removing the bag from the microwave – we recommend using oven mitts. It may be filled with steam, which may cause serious burns. DO NOT tip bag when removing from microwave.